

jura®



E6/E60 – Quick Reference Guide

E6/E60 – Quick Reference Guide



These short instructions do not replace the 'E6/E60 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can start coffee system rinsing manually at any time.



Precondition: The start screen is displayed.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press the '☸' button (white Maintenance symbol).
- ▶ Press the 'Rinse the coffee system' button to start the rinse operation.

'Machine is rinsing', water flows out of the coffee spout. The operation stops automatically. The start screen is displayed.

Rinsing the fine foam frother

After each milk preparation, the JURA prompts you to perform a milk system rinse.



Precondition: 'Rinse the milk system' is displayed.

- ▶ Place a receptacle under the fine foam frother.
- ▶ Press the '☸' button (red Maintenance symbol).

'Switch open'

- ▶ Turn the switch to the ☺ position.

'Milk system is being rinsed' appears and the fine foam frother is rinsed.

The rinse stops automatically. 'Switch close' appears on the display.

- ▶ Turn the switch to the Ⓛ position.
The start screen is displayed.

Cleaning the fine foam frother

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk.




CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA milk system cleaner is available from specialised dealers.

Precondition: The start screen is displayed.


- ▶ Press the 'P' button.
- ▶ Press the 'Clean the milk system' button.
'Clean the milk system'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
'Clean the milk system' / 'Milk system cleaner'
- ▶ Remove the milk pipe from the milk container or carton.
- ▶ Pour 250 ml of fresh water into a receptacle and add 1 capful of milk system cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Place a receptacle under the fine foam frother.
- ▶ Press the 'Next' button.
As soon as the machine has heated up, 'Switch open' appears.
- ▶ Turn the switch to the  position.
'Milk system is being cleaned' appears and the fine foam frother and the milk pipe are cleaned.
'Switch close'
- ▶ Turn the switch to the  position.
'Clean the milk system'
- ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.
- ▶ Empty the other receptacle and place it under the fine foam frother once more.
- ▶ Press the 'Next' button.
'Switch open'
- ▶ Turn the switch to the  position.
'Milk system is being cleaned' appears and the fine foam frother and the milk pipe are rinsed with fresh water.
'Switch close'



- ▶ Turn the switch to the **I** position.
The start screen is displayed.

Dismantling and rinsing the fine foam frother

To make sure the fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your JURA will not prompt you to dismantle and rinse the frother.

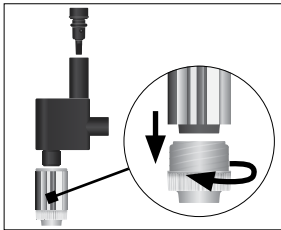

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ▶ Dismantle the fine foam frother into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ▶ Re-assemble the fine foam frother.


- i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
- ▶ Firmly attach the fine foam frother to the Connector System[®].

Inserting the filter

Your JURA no longer has to be descaled if you are using the CLARIS Smart filter cartridge. If you did not insert the filter cartridge the first time you used the machine, you can do this now as follows.

Precondition: The start screen is displayed.

- ▶ Remove and empty the water tank.
- ▶ Fit the filter cartridge extension supplied on top of a CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.

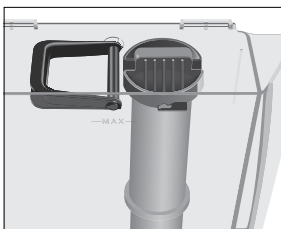

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just inserted the filter cartridge.

‘Saved’ appears briefly on the display.

‘Switch open’

- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.
- ▶ Turn the switch to the ☰ position.

‘Filter is being rinsed’, water flows out of the fine foam frother.

Rinsing of the filter stops automatically after approximately 300 ml. ‘Switch close’ appears on the display.

- ▶ Turn the switch to the ① position.
The start screen is displayed.

i If the filter is active, this is indicated by a blue filter symbol at the bottom of the display.




Changing the filter

i Once the filter cartridge stops working (depending on the water hardness setting), the JURA will prompt you to change the filter.

i CLARIS Smart filter cartridges are available from specialised dealers.

Precondition: The start screen is displayed. The filter symbol at the bottom of the display lights up red.

- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.

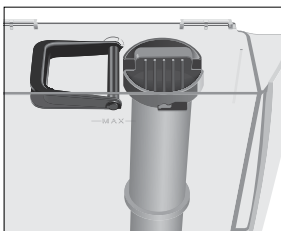



- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

‘Saved’ appears briefly on the display. The machine has automatically detected that you have just changed the filter cartridge.

‘Switch open’

- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.
- ▶ Turn the switch to the ☰ position.

‘Filter is being rinsed’, water flows out of the fine foam frother.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. ‘Switch close’ appears on the display.

- ▶ Turn the switch to the ⊕ position.
The start screen is displayed.

Descaling the machine

The JURA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

⚠ CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.
-

CAUTION If the descaling operation is interrupted, there may be damage to the machine.




- ▶ Allow the descaling programme to run to the end.


CAUTION If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

- i** The descaling programme lasts approximately 40 minutes.
- i** JURA descaling tablets are available from specialised dealers.

Precondition: ‘Decalcify machine’ is displayed.

- ▶ Press the ‘’ button (red Maintenance symbol).
‘Descalce’
- ▶ Press the ‘Start’ button.
- ▶ Press the ‘Next’ button.
‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Agent in tank’
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 500 ml of lukewarm water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.
‘Switch open’
- ▶ Place a receptacle under the fine foam frother.
- ▶ Turn the switch to the  position.
‘Machine is being descaled’ appears and water flows out of the fine foam frother repeatedly.
The operation is interrupted, ‘Switch close’.
- ▶ Turn the switch to the  position.
‘Machine is being descaled’, the descaling operation is continued.
The operation is interrupted, ‘Empty drip tray’.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Fill water tank’

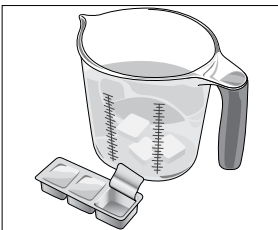

E6/E60 – Quick Reference Guide



- ▶ Empty the receptacle and place it under the fine foam frother and the coffee spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

‘Switch open’

- ▶ Turn the switch to the ☺ position.
‘Machine is being descaled’, the descaling operation is continued.

The operation is interrupted, ‘Switch close’.

- ▶ Turn the switch to the ⓪ position.
‘Machine is being descaled’, the descaling operation is continued. Water flows out of the coffee spout.

The operation is interrupted ‘Empty drip tray’

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling is now complete. The start screen is displayed.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.