

jura[®]



J6/J600 – Quick Reference Guide

J6/J600 – Quick Reference Guide



These short instructions do not replace the 'J6/J600 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.



- Place a receptacle under the coffee spout.
- Press the P button.

'Maintenance status'

- Press the Rotary Switch.
- Turn the Rotary Switch until **'Rinse'** is displayed.
- Press the Rotary Switch to initiate the rinse operation.
'Machine is rinsing', 'Milk system is being rinsed', water flows out of the coffee spout.
- The rinse stops automatically. **'Please select product'** appears on the display.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically rinsed**. Therefore always place a receptacle under the cappuccino frother after preparing milk.

When **'Rinse the milk system'** is displayed, you can start rinsing by pressing the Rotary Switch.

Cleaning the milk system

To ensure that the cappuccino frother always works properly, you must clean it **daily** when you have been preparing milk.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA milk system cleaner is available from specialised dealers.

i To clean the milk system, use the container supplied.

- ▶ Press the P button.
'Maintenance status'
- ▶ Press the Rotary Switch.
'Clean'
- ▶ Turn the Rotary Switch until '**Clean the milk system**' is displayed.
- ▶ Press the Rotary Switch.
'Clean the milk system'
- ▶ Press the Rotary Switch again.
- ▶ Press the '**Start**' button.
- ▶ Remove the milk pipe from the milk container or carton.
- ▶ Add milk system cleaner to the front part of the container up to the **bottom mark** (indicated by ).
- ▶ Then fill with water up to the **upper mark**.
- ▶ Place the container under the cappuccino frother.
- ▶ Turn the setting wheel of the cappuccino frother to the Milk position .

- ▶ Connect the milk pipe to the container.


i To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.

- ▶ Press the '**Next**' button.
'Milk system is being cleaned' appears and the cappuccino frother and the milk pipe are cleaned.





Dismantling and rinsing the cappuccino frother

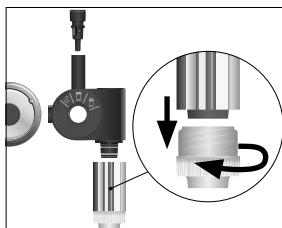

- ▶ During the first brief interruption, set the setting wheel of the cappuccino frother to the Milk Foam position .
- 'Water for cleaning milk system'**
- ▶ Rinse the container thoroughly and fill the front part with fresh water up to the **upper mark**.
- ▶ Place this under the cappuccino frother and reconnect the milk pipe to the container.
- ▶ Press the **'Next'** button.
'Milk system is being cleaned' appears and the cappuccino frother and the milk pipe are rinsed with fresh water.
The start screen is displayed.

To make sure the cappuccino frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Carefully pull the cappuccino frother down and off.
- ▶ Dismantle the cappuccino frother into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ▶ Reassemble the cappuccino frother.

i Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the cappuccino frother.

- ▶ Firmly attach the frother to the connector.

Inserting the filter



Your JURA no longer has to be descaled if you are using the CLARIS Smart filter cartridge. If you did not insert the filter cartridge the first time you used the machine, you can do this now as follows.

- ▶ Place a receptacle under the hot-water spout.
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder.
- ▶ Fit the filter cartridge extension supplied on top of a CLARIS Smart filter cartridge.

- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just inserted the filter cartridge.

'Filter operation' / 'Saved'

'Filter is being rinsed', water flows out of the hot-water spout.

Rinsing of the filter stops automatically after approximately 300 ml.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

'Filter operation' / 'Filter rinsing complete'

'Please select product' appears on the display. Your JURA is once more ready for use.

Changing the filter



i Once the filter cartridge stops working (depending on the water hardness setting), the JURA will prompt you to change the filter.

i CLARIS Smart filter cartridges are available from specialised dealers.

Precondition: ‘Change filter’ is displayed.

- ▶ Place a receptacle under the hot-water spout.
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Smart filter cartridge and filter extension.
- ▶ Fit the filter cartridge extension on top of a **new** CLARIS filter cartridge Smart.

- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just changed the filter cartridge.

‘Change the filter’ / ‘Saved’

‘Filter is being rinsed’, water flows out of the hot-water spout.

‘Empty drip tray’

- ▶ Empty the drip tray and put it back into the machine.

‘Change the filter’ / ‘Filter rinsing complete’

‘Please select product’ appears on the display. Your JURA is once more ready for use.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the JURA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: ‘Clean machine’ is displayed.

- ▶ Press the P button.
‘Clean’
 - ▶ Press the Rotary Switch.
 - ▶ Press the ‘Start’ button.
 - ▶ Press the ‘Start’ button again.
‘Empty coffee grounds container’
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
 - ‘Press the Rotary Switch’**
 - ▶ Place one receptacle under the coffee spout and another under the cappuccino frother.
 - ▶ Press the Rotary Switch.
‘Machine is being cleaned’, water flows out of the coffee spout.
 - The operation is interrupted, **‘Add cleaning tablet’**.
 - ▶ Open the cover of the filler funnel for ground coffee.
 - ▶ Insert a JURA cleaning tablet into the filler funnel.
 - ▶ Close the cover of the filler funnel.
‘Press the Rotary Switch’
 - ▶ Press the Rotary Switch.
‘Machine is being cleaned’, water flows repeatedly out of the coffee spout and the cappuccino frother.
 - The operation stops automatically.
 - ‘Empty coffee grounds container’**
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- Cleaning is now complete. The start screen is displayed.



Descaling the machine

The JURA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

⚠ CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.

CAUTION

If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.


- ▶ Clean up any splashes immediately.

i The descaling programme lasts approximately 45 minutes.

i JURA descaling tablets are available from specialised dealers.

Precondition: ‘Decalcify machine’ is displayed.

- ▶ Press the P button.
‘Descale’
- ▶ Press the Rotary Switch.
- ▶ Press the **‘Start’** button.
- ▶ Press the **‘Start’** button again.
‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Pour descaling agent into water tank’
- ▶ Remove and empty the water tank.

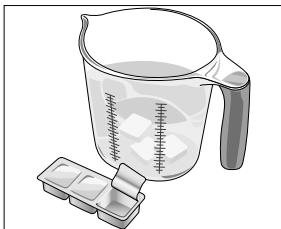

- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.

- ▶ Place one receptacle under the hot-water spout and another under the cappuccino frother.

'Press the Rotary Switch'

- ▶ Press the Rotary Switch.
'Machine is being descaled' appears and water flows repeatedly out of the hot-water spout and the cappuccino frother. The operation is interrupted, **'Empty drip tray'**.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Fill water tank'
 - ▶ Remove the water tank and rinse it thoroughly.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
'Press the Rotary Switch'
 - ▶ Place a receptacle under the cappuccino frother, the coffee spout and the hot-water spout.
 - ▶ Press the Rotary Switch.
'Machine is being descaled', the descaling operation is continued.
The operation is interrupted, **'Empty drip tray'**.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- Descaling is now complete. The start screen is displayed.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

J6/J600 – Quick Reference Guide**Cleaning the bean container**

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: ‘Fill bean container’ is displayed.

- ▶ Switch the machine off with the On/Off button .
- ▶ Open the bean container cover and remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans, then close the aroma preservation cover and the bean container cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLARIS Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinser the tank.