

*jura*®



## WE6 Instructions for Use



Original instructions for use

Before using the machine read the instructions for use.

## Your WE6

<b>Control elements</b>	<b>4</b>
<b>Important information</b>	<b>6</b>
Proper use .....	6
For your safety .....	6
<b>1 Preparing and using for the first time</b>	<b>10</b>
JURA on the Internet .....	10
Setting up the machine .....	10
Filling the bean container .....	10
Determining the water hardness .....	10
First-time use .....	11
<b>2 Preparation</b>	<b>15</b>
Espresso, coffee and other speciality coffees .....	15
Two speciality coffees .....	16
Permanently setting the amount of water for the cup size .....	16
Adjusting the grinder .....	17
Hot water .....	17
<b>3 Daily operation</b>	<b>18</b>
Filling the water tank .....	18
Switching on the machine .....	18
Daily maintenance .....	18
Regular maintenance .....	19
Switching off the machine .....	19
<b>4 Permanent settings in programming mode</b>	<b>20</b>
Adjusting the product settings .....	21
Enable or disable setting of cup volume .....	22
Enable or disable one-off settings .....	22
Enable and disable products .....	23
Automatic switch-off .....	23
Setting the water hardness .....	24
Unit for amount of water .....	24
Language .....	25
Querying information .....	25
<b>5 Maintenance</b>	<b>26</b>
Rinsing the machine .....	26
Inserting the filter .....	26
Changing the filter .....	27
Cleaning the machine .....	28
Descaling the machine .....	29
Cleaning the bean container .....	31
Descaling the water tank .....	32

6	Display messages	33
7	Troubleshooting	34
8	Transport and environmentally friendly disposal	35
	Transport / Emptying the system.....	35
	Disposal.....	35
9	Technical data	36
10	Index	37
11	JURA contact details / Legal information	40

## Symbol description

### Warnings

 <b>WARNING</b>	Always take note of any information marked with the words <b>CAUTION</b> or <b>WARNING</b> and a warning sign. The signal word <b>WARNING</b> draws your attention to potential serious injury, and the signal word <b>CAUTION</b> to potential minor injury.
 <b>CAUTION</b>	<b>CAUTION</b> draws your attention to potential damage to the machine.

### Symbols used

	<b>Prompt to take action.</b> This symbol means that you are being prompted to perform some action.
	<b>Information</b> and tips to make it even easier to use your JURA.
	<b>Display</b>

## Control elements



- 1 Cover of filler funnel for cleaning tablet
- 2 Filler funnel for cleaning tablet
- 3 Bean container with aroma preservation cover
- 4 Water tank cover
- 5 Water tank
- 6 Plug-in mains cable (back of the machine)
- 7 Coffee grounds container
- 8 Drip tray

- 9 Cover cap for grinder adjustment switch
- 10 Grinder adjustment switch
- 11 On/Off button 
- 12 Hot-water nozzle
- 13 Height-adjustable coffee spout
- 14 Cup grille



- 1 Display
- 2 Multi-function buttons (button function depends on what is shown in the display)
- 3 Switch for hot water preparation

## Important information

### Proper use

This machine is intended for use by specialist or trained staff in businesses, light industry and agricultural facilities or for commercial use by non-professionals. It should only be used for coffee preparation and to heat water. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Before using the machine read these instructions for use thoroughly and completely and comply with the instructions they contain. A warranty service is not applicable for damage or defects caused by non-compliance with the instructions for use. Keep these instructions for use close to the machine and pass them on to the next user.

The JURA may only be operated by instructed persons. Non-professionals must be supervised during use.

### For your safety

Please carefully read and observe the important safety information set out below.



To avoid danger of potentially fatal electric shock:

- Never use a machine which is damaged or has a defective mains cable.
- In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from the mains supply and contact JURA service.
- If the mains cable of this machine is damaged it must be replaced with a special mains cable,

which is available directly from JURA or from authorised JURA service centres.

- Make sure that the JURA and the mains cable are not located close to hot surfaces.
- Be careful to ensure that the mains cable is not trapped and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in these instructions for use. The machine contains live parts. If opened, there is a danger of potentially fatal injury. Repairs may only be carried out by authorised JURA service centres, using original spare parts and accessories.
- To completely and safely disconnect the machine from the power supply, first switch off the JURA using the On/Off button. Only then should you remove the mains plug from the power socket.

There is a risk of scalds or burns on the spouts.

- Place the machine out of the reach of children.
- Do not touch any hot parts. Use the handles provided.

A defective machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Never allow the mains cable to loosely hang down. The mains cable could pose a tripping hazard or become damaged.
- Protect the JURA from environmental influences such as rain, frost and direct sunlight.
- Do not immerse the JURA, mains cable or connections in water.

## Important information

- Do not put the JURA or any individual parts in the dishwasher.
- Before cleaning, switch the JURA off with the On/Off button. Always wipe the JURA with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash.
- The JURA is not suitable for installation on a surface where a jet of water can be used.
- The machine must not be cleaned with a jet of water.
- Only connect the machine to the mains voltage in accordance with the information on the rating plate. The rating plate is located on the underside of your JURA. Further technical data is provided in these instructions for use (see Chapter 9 'Technical data').
- Connect the JURA directly to a domestic power socket. Using multi-socket adapters or extension cords may cause overheating.
- Please only use original JURA maintenance products. Use of products that are not explicitly recommended by JURA could damage the machine.
- Do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Do not use any coffee beans treated with additives or caramelised coffee beans.
- Only fill the water tank with fresh, cold water.
- Switch the machine off with the On/Off button if you are going to be absent for a longer period of time and remove the mains plug from the power socket.
- Children may not clean or service the machine unless supervised by a responsible person.

- Do not allow children to play with the machine.
- Keep children under the age of 8 away from the machine, or supervise them constantly.
- Children aged 8 and over may only operate the machine without supervision if they have been instructed in how to use it safely. Children must be able to recognise and understand the potential dangers arising from incorrect use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge in how to use the machine safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Safety when handling the CLARIS Pro Smart filter cartridge:

- Filter cartridges should be kept out of the reach of children.
- Store filter cartridges in a dry place in the sealed packaging.
- Protect cartridges from heat and direct sunlight.
- Do not use damaged filter cartridges.
- Do not open filter cartridges.
- The CLARIS Pro Smart filter cartridge communicates with your WE6 via RFID technology (frequency band 13.56 MHz). This wireless connection is only used for a maximum of 3 sec. during preparation. In this case, the maximum transmission power is below 1 mW.

## 1 Preparing and using for the first time

### JURA on the Internet

Visit us on the Internet. You can download **short operating instructions** for your machine from the JURA website ([jura.com](http://jura.com)). You will also find interesting and up-to-date information on your JURA and on every aspect of coffee.

### Setting up the machine



When setting up your JURA, please note the following:

- Place the JURA on a horizontal surface that is not sensitive to water.
- Choose a spot for your JURA which protects the machine against overheating. Ensure that the ventilation slots are not covered.

### Filling the bean container

#### CAUTION

---

Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.
- 
- ▶ Remove the aroma preservation cover.
  - ▶ Remove any dirt or foreign objects from inside the bean container.
  - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

### Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you do not know the hardness of your water, you can find this out first. Use the Aquadur® test strips supplied with the machine.

- ▶ Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ▶ Wait for about 1 minute.



## 1 Preparing and using for the first time

- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Use filter'

- i** Now decide whether you want to operate your JURA **with** or **without** a CLARIS Pro Smart filter cartridge.

Operation **with** filter cartridge: go straight to the next section (see Chapter 1 'Preparing and using for the first time – First-time use with filter cartridge activation').

Operation **without** filter cartridge (see Chapter 1 'Preparing and using for the first time – First-time use without filter cartridge activation').

### First-time use with filter cartridge activation

#### CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.



- ▶ Remove the water tank and rinse it with cold water.
- ▶ Open the filter holder.
- ▶ Insert the CLARIS Pro Smart filter cartridge into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

- i** The machine automatically detects that you have just inserted the filter cartridge.

'Use filter' / 'Saved'  
'Switch open'



- ▶ Place a receptacle (at least 300 ml) under the hot-water nozzle.
- ▶ Turn the switch to the ☰ position.  
‘Filter is being rinsed’, water flows out of the coffee spout. Rinsing of the filter stops automatically after approximately 300 ml. ‘Switch close’ appears on the display.
- ▶ Turn the switch to the ① position.  
‘Filter rinsing complete’  
‘System is filling’, the system fills up with water.  
‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
‘Machine is rinsing’, the system is rinsed. The rinse stops automatically. Your JURA is ready for use.

- i** The start screen shows the products you can prepare.
- i** If the filter is active, this is indicated by a blue filter symbol at the bottom of the display.

### First-time use without filter cartridge activation

**CAUTION** Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.



- ▶ Press the ‘No filter’ button.  
‘Saved’ appears briefly on the display.  
‘Fill water tank’
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.  
‘Switch open’

## 1 Preparing and using for the first time



- ▶ Place a receptacle under the hot-water nozzle and the coffee spout.
- ▶ Turn the switch to the  position.  
**'System is filling'**, the system fills up with water.  
**'Switch close'**
- ▶ Turn the switch to the  position.  
**'System is filling'**  
**'Machine is rinsing'**, the system is rinsed. The rinse stops automatically. Your JURA is ready for use.

**i** The start screen shows the products you can prepare.

## 2 Preparation

- i** You can stop the machine at any time while a speciality coffee or hot water is being prepared. Just press any button (for a speciality coffee) or return the switch to its original position (for hot water).
- i** During the grinding operation you can select the coffee strength of **single products** by pressing the '<' and '>' buttons.
- i** During preparation you can change the preset **amount of water** by pressing the '<' and '>' buttons.

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialised dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

### Espresso, coffee and other speciality coffees

Ristretto, espresso, coffee and special coffee are all prepared following this model.

**Example:** Proceed as follows to prepare one coffee.

**Precondition:** The start screen is displayed.

- ▶ Place a cup under the coffee spout.
  - ▶ Press the 'Coffee' button.
- Preparation starts. 'Coffee' and the coffee strength are displayed. The preset amount of water for coffee flows into the cup.
- Preparation stops automatically. Your JURA is once more ready for use.



## Two speciality coffees

To prepare **two** speciality coffees, press the appropriate preparation button twice (within approximately 1 second).

**Example:** Proceed as follows to prepare two espressi.

**Precondition:** The start screen is displayed.

- ▶ Place two cups under the coffee spout.
- ▶ Press the **'Espresso'** button **twice (within 1 second)** to start preparation.  
**'2 espresso'**, the preset amount of water flows into the cups. Preparation stops automatically. Your JURA is once more ready for use.



## Permanently setting the amount of water for the cup size

It is easy to permanently adjust the amount of water for all **single products** to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount will be dispensed.

**Example:** Proceed as follows to **permanently** set the amount of water for one coffee.

**Precondition:** The start screen is displayed.

- ▶ Place a cup under the coffee spout.
- ▶ Press and **hold** the **'Coffee'** button until **'Enough coffee? Press button'** appears.
- ▶ Release the **'Coffee'** button.  
Preparation starts and the coffee flows into the cup.
- ▶ Press any button except **'Cancel'** as soon as there is sufficient coffee in the cup.  
Preparation stops. **'Saved'** appears briefly on the display. The set amount of water for one coffee is permanently stored. Your JURA is once more ready for use.



- i** You can alter this setting at any time by repeating the above procedure.
- i** You can also permanently set the amounts for all single products in programming mode (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

## Adjusting the grinder

You can adjust the grinder on a continuous scale to suit the degree of roast of your coffee.

### CAUTION

If you adjust the consistency of grind when the grinder is not operating, the grinder adjustment switch could be damaged.

- ▶ Only adjust the consistency of grind when the grinder is running.

The consistency of grind is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.

**Example:** Proceed as follows to change the consistency of grind **during** the preparation of an espresso.

- ▶ Place a cup under the coffee spout.
- ▶ Open the cover of the grinder adjustment switch.
- ▶ Press the **'Espresso'** button to start preparation.
- ▶ Turn the grinder adjustment switch to the desired position **while** the grinder is running.  
The preset amount of water flows into the cup. Preparation stops automatically.
- ▶ Close the cover of the grinder adjustment switch.



## Hot water

### ⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.



**Precondition:** The start screen is displayed.

- ▶ Place a cup under the hot-water spout.
- ▶ Turn the switch to the  position.  
**'Hot water'**, the preset amount of water flows into the cup.  
Preparation stops automatically.  
**'Switch close'**
- ▶ Turn the switch to the  position.  
Your JURA is once more ready for use.

## 3 Daily operation

### Filling the water tank

Daily maintenance of the machine and hygiene when handling coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

#### CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

---

- ▶ Open the water tank cover.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Close the water tank cover.



### Switching on the machine



- ▶ Place a receptacle under the coffee spout.
- ▶ Press the On/Off button  to switch the JURA on.  
**'Welcome to JURA'**  
**'Machine is rinsing'**, the system is rinsed. The rinse stops automatically. The start screen is displayed. Your JURA is ready for use.

### Daily maintenance



To ensure that you get many years of reliable service out of your JURA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
- ▶ Empty the coffee grounds container and the drip tray. Rinse them both with warm water.

**i** Always empty the coffee grounds container when the machine is **switched on**. This is the only way of resetting the coffee grounds counter.

- ▶ Refit the coffee grounds container and the drip tray.
- ▶ Rinse the water tank with clean water.
- ▶ Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfibre cloth).

## Regular maintenance

Carry out the following maintenance actions **regularly** or **as required**:

- Clean the inside of the water tank, e.g. with a brush. Further information about the water tank is provided in these instructions for use (see Chapter 5 'Maintenance – Descaling the water tank').
- Traces of coffee may stick to the top and bottom of the cup grille. If this happens, clean the cup grille.

## Switching off the machine

When the JURA is switched off, the system is automatically rinsed if a speciality coffee has been prepared.

**Precondition:** The start screen is displayed.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press the On/Off button .

'Machine is rinsing', the system rinses itself. The operation stops automatically. Your JURA is switched off.



## 4 Permanent settings in programming mode

Press the 'P' button to enter programming mode. You can navigate through the programme items and permanently save the required settings using the multi-function buttons. The following settings can be made:

Programme item	Sub-item	Explanation
'1/5'	'Clean', 'Descale', 'Filter' (only if filter is activated)	▶ <b>Start</b> the required maintenance programme here.
'2/5'	'Rinse the coffee system', 'Information'	▶ Here you can <b>start</b> coffee system rinsing or find out what maintenance actions are required.
'3/5'	'Expert mode'	▶ Select your settings for speciality coffees and hot water.
	'Customise cup fill volume'	▶ Disable the function "Permanently setting the amount of water for the cup size".
	'One-off settings'	▶ Specify whether or not to allow one-off settings during preparation.
'4/5'	'Lock/enable'	▶ Enable or disable individual products.
	'Choose language'	▶ Select your language.
	'Units'	▶ Select the unit for the amount of water.
	'Switch off after'	▶ Set the time after which the JURA should switch off automatically.
'5/5'	'Water hardness'	▶ Adjust the water hardness.
	'Product counter', 'Day counter', 'Maintenance counter', 'Version'	▶ Keep track of all prepared products and view the maintenance status.

## Adjusting the product settings

In the programme item '3/5' / 'Expert mode' you can make individual settings for all speciality coffees and hot water. The following permanent settings can be made:

Product	Coffee strength	Amount	Temperature
'Ristretto', 'Espresso'	8 levels	Water: 15 ml – 80 ml	normal, high
'Coffee', 'Special'	8 levels	Water: 25 ml – 240 ml	normal, high
'2 ristretti', '2 espressi', '2 coffees'	–	Water: The amount set for the single product is doubled.	as for single product
'Hot water'	–	Water: 25 ml – 450 ml	low, normal, high

Permanent settings in programming mode always follow the same model.

**Example:** Proceed as follows to change the coffee strength for one coffee.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'Expert mode' button.  
'Expert mode'
- i** Next select the button of the product for which you would like to make settings. No product is prepared at this point.
- i** To display more products, press the '>' button (bottom right).
  - ▶ Press the 'Coffee' button.  
'Coffee'
  - ▶ Press the 'Coffee strength' button.  
'Coffee' and the coffee strength is displayed.
  - ▶ Press the '<' or '>' button to change the setting for the coffee strength.
  - ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Coffee'
  - ▶ Press the 'L' button for **around 2 seconds** to exit programming mode.

## Enable or disable setting of cup volume

In the programme item '3/5' / 'Customise cup fill volume' you can make the following setting:

- **'Active'**: The function 'Permanently setting the amount of water for the cup size' is activated. You can adjust the amount of water to the cup size by pressing and holding the relevant preparation button.
- **'Inactive'**: The function 'Permanently setting the amount of water for the cup size' is deactivated. The amount of water **cannot** be adjusted to the cup size by pressing and holding the relevant preparation button.

**Example:** Proceed as follows to disable the function 'Permanently setting the amount of water for the cup size'.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'Customise cup fill volume' button.  
'Customise cup fill volume'
- ▶ Press the 'Inactive' button.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'3/5'
- ▶ Press the 'L' button to exit programming mode.

## Enable or disable one-off settings

In the programme item '3/5' / 'One-off settings' you can make the following setting:

- **'Active'**: One-off settings can be made during preparation (e.g. coffee strength or amount of water).
- **'Inactive'**: One-off settings cannot be made during preparation. The product is prepared according to the settings in programming mode ('3/5' / 'Expert mode').

**Example:** Proceed as follows to disable one-off settings during preparation.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'One-off settings' button.  
'One-off settings'
- ▶ Press the 'Inactive' button.

- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'3/5'
- ▶ Press the 'L' button to exit programming mode.

## Enable and disable products

In the programme item '3/5' / 'Lock/enable' you can enable or disable each product individually.

**Example:** Proceed as follows to disable the preparation of hot water.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'Lock/enable' button.  
'Lock/enable'

**i** The lock symbol beside the product name indicates whether the product is enabled or disabled. If the lock is closed, the product is disabled.

- ▶ Press the '>' button until the product 'Hot water' is displayed.
- ▶ Press the 'Hot water' button.  
The lock is closed. Hot water preparation is now disabled.
- ▶ Press the 'L' button for **around 2 seconds** to exit programming mode.

## Automatic switch-off

By instructing your JURA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your JURA switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1–9 hours.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Switch off after' button.  
'Switch off after'
- ▶ Press the '<' or '>' button to change the switch-off time.

- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'4/5'
- ▶ Press the 'L' button to exit programming mode.

## Setting the water hardness

The harder the water is, the more frequently the JURA needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness was set when the machine was first used. You can change this setting at any time.

The total water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Water hardness' button.  
'Water hardness'
- ▶ Press the '<' or '>' button to change the setting for the water hardness.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'4/5'
- ▶ Press the 'L' button to exit programming mode.

## Unit for amount of water

**Example:** Proceed as follows to change the unit for the amount of water from 'ml' to 'oz'.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Units' button.  
'Units'
- ▶ Press the 'oz' button.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'4/5'
- ▶ Press the 'L' button to exit programming mode.

## Language

**Example:** Proceed as follows to change the language from 'English' to 'Deutsch'.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Choose language' button.  
'Choose language'
- i** To display more languages, press the '>' button (bottom right).
  - ▶ Press the button that corresponds to the language you want, e.g. 'Deutsch'.  
'Gespeichert' appears briefly on the display.  
'4/5'
  - ▶ Press the 'L' button to exit programming mode.

## Querying information

In the programme item '5/5' you can view the following information.

- 'Product counter': number of prepared speciality coffees and hot water
- 'Day counter': number of prepared speciality coffees and hot water. This counter can be reset to zero.
- 'Maintenance counter': number of maintenance programmes performed (cleaning, descaling etc.)
- 'Version': software version

**Example:** Proceed as follows to reset the **day counter**.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '5/5' is displayed.
- ▶ Press the 'Day counter' button.
- ▶ Press the 'L' button.  
'Delete the day counter?'
- ▶ Press the 'Yes' button.  
'Saved' appears briefly on the display.  
'5/5'
- ▶ Press the 'L' button to exit programming mode.

## 5 Maintenance

Your JURA has the following integrated maintenance programmes:

- Rinsing the machine ('Rinse the coffee system')
- Changing the filter ('Filter')
- Cleaning the machine ('Clean')
- Descaling the machine ('Descale')

**i** Carry out each maintenance programme when you are prompted to do so.

**i** Press the 'P' button to view a list of the maintenance programmes. When the bar is completely filled with red, your JURA will prompt you to perform the appropriate maintenance programme.

### Rinsing the machine



You can start coffee system rinsing manually at any time.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press the '☼' button (white Maintenance symbol).
- ▶ Press the 'Rinse the coffee system' button to start the rinse operation.

'Machine is rinsing', water flows out of the coffee spout. The operation stops automatically.

### Inserting the filter



Your JURA no longer has to be descaled if you are using the CLARIS Pro Smart filter cartridge. If you did not insert the filter cartridge the first time you used the machine, you can do this now as follows.

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder.
- ▶ Insert the CLARIS Pro Smart filter cartridge into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

**i** The machine automatically detects that you have just inserted the filter cartridge.

'Saved' appears briefly on the display.

'Switch open'



- ▶ Place a receptacle (at least 300 ml) under the hot-water nozzle.
- ▶ Turn the switch to the  position.  
‘Filter is being rinsed’, water flows out of the hot-water nozzle.  
Rinsing of the filter stops automatically after approximately 300 ml. ‘Switch close’ appears on the display.
- ▶ Turn the switch to the  position.

**i** If the filter is active, this is indicated by a blue filter symbol at the bottom of the display.

## Changing the filter

- i** Once the filter cartridge stops working (depending on the water hardness setting), the JURA will prompt you to change the filter.
- i** CLARIS Pro Smart filter cartridges are available from specialised dealers.

**Precondition:** The start screen is displayed. The filter symbol at the bottom of the display lights up red.

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLARIS Pro Smart filter cartridge.
- ▶ Insert the **new** CLARIS Pro Smart filter cartridge into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

‘Saved’ appears briefly on the display. The machine has automatically detected that you have just changed the filter cartridge.

‘Switch open’





- ▶ Place a receptacle (at least 300 ml) under the hot-water nozzle.
- ▶ Turn the switch to the  position.  
'Filter is being rinsed', water flows out of the hot-water nozzle.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. 'Switch close' appears on the display.

- ▶ Turn the switch to the  position.

## Cleaning the machine

After 180 preparations or 80 switch-on rinses, the JURA will prompt you to clean it.

### CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

**Precondition:** 'Clean machine' is displayed.

- ▶ Press the '' button (red Maintenance symbol).  
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.  
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Clean'



- ▶ Place a receptacle under the coffee spout.
- ▶ Press the 'Next' button.  
'Machine is being cleaned', water flows out of the coffee spout.  
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for the cleaning tablet.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Press the 'Next' button.  
'Machine is being cleaned', water flows out of the coffee spout several times.  
The operation stops automatically.  
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
Cleaning is now complete.

## Descaling the machine

The JURA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Pro Smart filter cartridge, you will not be prompted to descale.

### ⚠ CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

### CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

### CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.


**CAUTION** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- ▶ Clean up any splashes immediately.

- i** The descaling programme lasts approximately 40 minutes.
- i** JURA descaling tablets are available from specialised dealers.

**Precondition:** 'Decalcify machine' is displayed.

- ▶ Press the '⚙️' button (red Maintenance symbol).  
'Descale'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.  
'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Agent in tank'
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.  
'Switch open'

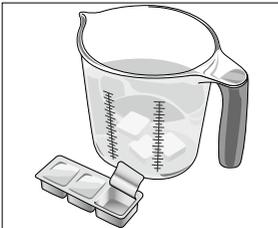

- ▶ Place a receptacle under the hot-water nozzle.
- ▶ Turn the switch to the ☺ position.  
'Machine is being descaled', water flows out of the hot-water nozzle repeatedly.  
The operation is interrupted, 'Switch close'.
- ▶ Turn the switch to the Ⓜ position.  
'Machine is being descaled', The descaling operation is continued.  
The operation is interrupted, 'Empty drip tray'.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Fill water tank'



- ▶ Empty the receptacle and place it under the hot-water nozzle and the coffee spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ **‘Switch open’**
- ▶ Turn the switch to the ☰ position.
- ▶ **‘Machine is being descaled’**, the descaling operation is continued.
- ▶ The operation is interrupted, **‘Switch close’**.
- ▶ Turn the switch to the ⊕ position.
- ▶ **‘Machine is being descaled’**, the descaling operation is continued. Water flows out of the coffee spout.
- ▶ **‘Machine is rinsing’**
- ▶ The operation is interrupted, **‘Empty drip tray’**.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Descaling is now complete.

**i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

## Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

**Precondition:** **‘Fill bean container’** is displayed.

- ▶ Switch the machine off with the On/Off button ⏻.
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

## Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Pro Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLARIS Pro Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

## 6 Display messages

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	► Fill the water tank (see Chapter 3 'Daily operation – Filling the water tank').
'Empty coffee grounds container'	The coffee grounds container is full. You cannot prepare any products.	► Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	► Fit the drip tray.
'Fill bean container'	The bean container is empty. You cannot prepare any speciality coffees, but hot water preparation is possible.	► Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
The filter symbol at the bottom of the display lights up red.	The filter cartridge no longer works.	► Replace the CLARIS Pro Smart filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
'Clean machine'	The JURA is prompting you to clean it.	► Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
'Decalcify machine'	The JURA is prompting you to descale it.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
'Too hot'	The system is too hot to start a maintenance programme.	► Wait for several minutes until the system has cooled or prepare a speciality coffee or hot water.

## 7 Troubleshooting

Problem	Cause/Result	Action
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system. The water hardness may not have been correctly set.	<ul style="list-style-type: none"> <li>▶ Set the grinder to a coarser setting (see Chapter 2 'Preparation – Adjusting the grinder').</li> <li>▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').</li> </ul>
There is dry ground coffee behind the coffee grounds container.	The beans used are resulting in an above-average volume of ground coffee.	▶ Reduce the coffee strength or choose a finer grinder setting (see Chapter 2 'Preparation – Adjusting the grinder').
'Fill water tank' is displayed although the water tank is full.	The water tank float is trapped.	▶ Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	▶ Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').
'ERROR 2' or 'ERROR 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	▶ Warm the machine at room temperature.
Other 'ERROR' messages are displayed.	–	▶ Switch the JURA off with the On/Off button  . Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

**i** If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

## 8 Transport and environmentally friendly disposal

### Transport / Emptying the system

Keep the packaging for your JURA. It should be used to protect the machine during transport.

In order to protect the JURA from frost during transport, the system must be emptied.



- ▶ Place a receptacle under the hot-water nozzle.
  - ▶ Turn the switch to the  position.  
**‘Hot water’**, water flows out of the hot-water nozzle.
  - ▶ Remove and empty the water tank.  
Hot water will continue to flow from the hot-water nozzle until the system is empty.  
**‘Switch close’**
  - ▶ Turn the switch to the  position.  
**‘Fill water tank’**
  - ▶ Press the On/Off button .
- Your JURA is switched off.

### Disposal

Please dispose of old machines in an environmentally neutral way.



Old machines contain valuable, recyclable materials which should be recycled. Please therefore dispose of old machines via suitable collection systems.

## 9 Technical data

Voltage	220–240 V ~, 50 Hz
Power	1450 W
Ambient conditions	Humidity max. 80 % Ambient temperature 10–35 °C
Conformity mark	<b>CE</b>
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	3 l
Holding capacity of bean container	500 g
Holding capacity of coffee grounds container	max. 25 portions
Cable length	approx. 1.1 m
Weight	approx. 10.0 kg
Dimensions (W × H × D)	29.5 × 41.75 × 44.36 cm

### Wireless connection:

CLARIS Pro Smart filter cartridge (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
--	--

Information for testers (repeat test in accordance with DIN VDE 0701-0702): The central grounding point (CGP) is located on the underside of the machine, right next to the mains cable's connection point.

## 10 Index

### A

- Addresses 40
- Adjusting the product settings 21
- Aroma preservation cover
  - Bean container with aroma preservation cover 4
- Automatic switch-off 23

### B

- Bean container
  - Bean container with aroma preservation cover 4
  - Cleaning 31
  - Filling 10
- Bus bar
  - Technical data 36
- Button
  - On/Off button 4

### C

- Central grounding point 36
- CLARIS Pro Smart filter cartridge
  - Change 27
  - Insert 26
- Cleaning
  - Bean container 31
  - Machine 28
- Coffee 15
  - Two coffees 16
- Coffee grounds container 4
- Coffee spout
  - Height-adjustable coffee spout 4
- Consistency of grind
  - Adjusting the grinder 17
  - Grinder adjustment switch 4
- Contact details 40
- Cover
  - Filler funnel for cleaning tablet 4
  - Water tank 4
- Cup grille 4
- Customer support 40

### D

- Daily maintenance 18
- Declaration of Conformity 40

- Descaling
  - Machine 29
  - Water tank 32

- Disable
  - Products 23
- Display 5
- Display messages 33
- Disposal 35
- Double product 16
- Drip tray 4

### E

- Emptying the system 35
- Enable
  - Products 23
- Errors
  - Troubleshooting 34
- Espresso 15
  - Two espressos 16
- EU Declaration of Conformity 40

### F

- Filler funnel
  - Filler funnel for cleaning tablet 4
- Filling
  - Bean container 10
  - Water tank 18
- Filter
  - Change 27
  - Insert 26
- First-time use 11
  - With filter cartridge activation 12
  - Without filter cartridge activation 13

### G

- Grinder adjustment switch 4
- Grounding point 36

### H

- Height-adjustable coffee spout 4
- Homepage 10
- Hotline 40
- Hot water 17
- Hot-water nozzle 4
- Hot water preparation
  - Switch for hot water preparation 5

- I**
  - Internet 10
- J**
  - JURA
    - Contact details 40
    - Internet 10
- L**
  - Language 25
- M**
  - Machine
    - Cleaning 28
    - Daily maintenance 18
    - Descaling 29
    - Regular maintenance 19
    - Rinsing 26
    - Setting up 10
    - Switching off 19
    - Switching on 18
  - Mains cable 4
  - Maintenance 26
    - Daily maintenance 18
    - Regular maintenance 19
  - Messages, display 33
- P**
  - Permanently setting the water for the cup size 16
  - Permanent settings in programming mode 20
  - Preparation 15
    - Coffee 15
    - Espresso 15
    - Hot water 17
    - Ristretto 15
    - Special coffee 15
    - Two coffees 16
    - Two espressi 16
    - Two ristretti 16
    - Two speciality coffees 16
  - Problems
    - Troubleshooting 34
  - Products
    - Disable 23
    - Enable 23
    - Product settings
      - Adjusting 21
    - Programming mode 20
      - Automatic switch-off 23
      - Enable or disable setting of cup volume 22
      - Language 25
      - One-off settings 22
      - Querying information 25
      - Setting the water hardness 24
      - Unit for amount of water 24
    - Proper use 6
- Q**
  - Querying information 25
- R**
  - Regular maintenance 19
  - RFID 36
  - Rinsing
    - Machine 26
  - Ristretto 15, 16
    - Two ristretti 16
- S**
  - Safety 6
  - Safety information 6
  - Settings
    - Permanent settings in programming mode 20
  - Setting up
    - Setting up the machine 10
  - Short operating instructions 10
  - Special coffee 15
  - Switch for hot water preparation 5
  - Switching off 19
  - Switching on 18
  - Switch-off
    - Automatic switch-off 23
  - Symbol description 3
- T**
  - Technical data 36
  - Tel 40
  - Transport 35
  - Troubleshooting 34

## U

- Unit for amount of water 24
- Use, First-time 11

## W

- Water hardness
  - Determining the water hardness 10
  - Setting the water hardness 24
- Water tank 4
  - Descaling 32
  - Filling 18
- Website 10
- Wireless connection 12, 26, 27, 36

## 11 JURA contact details / Legal information

### Your JURA service partner



JURA Elektroapparate AG  
Kaffeeweltstrasse 10  
CH-4626 Niederbuchsiten  
Tel. +41 (0)62 38 98 233  
jura.com

- Directives** The machine complies with the following directives:
- 2006/42/EC – Machinery Directive
  - 2014/30/EU – Electromagnetic Compatibility
  - 2009/125/EC – Ecodesign Directive
  - 2011/65/EU – RoHS Directive
  - 2014/53/EU – Wireless Voltage Directive

A detailed EU Declaration of Conformity for your WE6 can be found at [jura.com/conformity](http://jura.com/conformity).

**Technical changes** We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your JURA may vary.

**Feedback** Your opinion is important to us! Use the contact details at [jura.com](http://jura.com).

**Copyright** The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.